


Intermediate/Mini Mite OPW Netting and Skirt

The net provided has 2 'long' sides; intended to go along the crossbar and base, and, 2 'short' sides; intended to go along the the posts.

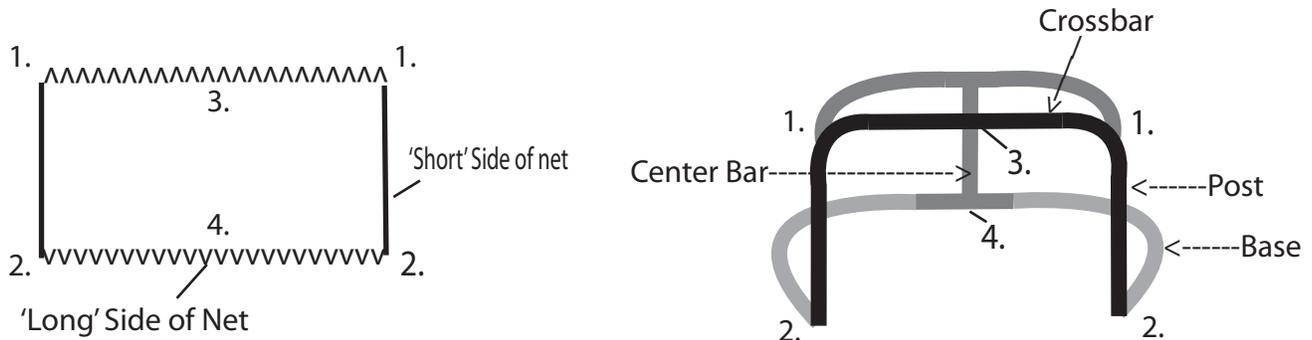

First, fasten 6 main points of the net onto the goal using the provided lacing cord.

1. Tie each top corner of the long side of netting to each top corner of goal where the post meets the crossbar
2. Tie each lower corner of netting to each lower corner of goal where the base meets the post
3. Count netting loops (selvages) along the top long side to find center, and fasten at center of crossbar
4. Do the same along the bottom netting, and fasten where the center bar meets the base

Begin lacing the bottom netting out from the center bar (4.) to both posts. (2.) Use all of the netting along all of the base. Netting selvages will not necessarily align with the wire loops, just keep the overall placement even.

Now lace the top netting along the crossbar, starting from the center (3.) out to each post. (1.) Again, use all of the netting along all of the crossbar. Netting selvages will not necessarily align with the wire loops, just keep the overall placement even.

Finish the lacing along the posts.

Once again, Use all of the netting along all of the post. Netting selvages will not necessarily align with the wire loops, just keep the overall placement even. Netting will tend to bunch up close at the top and again at the base.

Once netting is laced, skirting may be placed onto the goal's base. Skirting wraps around the base, sandwiching the net and pipe in between. This will provide protection inside and out. Center skirting, starting where the center bar meets the base. Lace out to the posts and tie to the post's wire loop. Skirting will not necessarily reach posts as to not impede pucks.

