



Intermediate/Mini Mite OPW Netting and Skirt

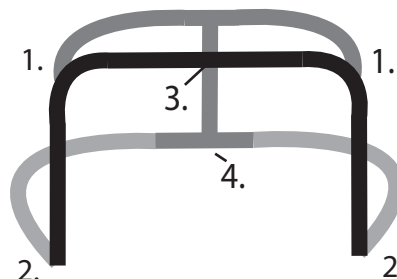

The netting provided has 2 'long' sides; intended to go along the crossbar and base, and, 2 'short' sides; intended to go along the the posts.

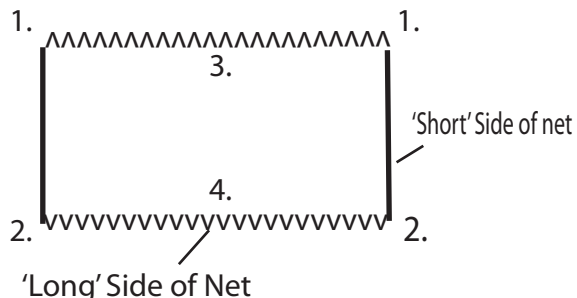

IMPORTANT: Attach at 6 Key areas before lacing!

Ziptie at top corners of netting and posts at (1) & bottom corners of netting and posts at (2). Count selvages to find center of netting at top and again at bottom, fasten at (3) and (4)
Selvages = loops of netting

Netting must be attached as above to properly align for lacing.

Tie one cord in to two equal halves at center of red crossbar (3), lacing out to corners of goal (1). Wire loops and selvages will not correspond one to one. Use all of the netting evenly across entire crossbar.

Tie one cord in to two equal halves at base (4), lacing out to each red post (2). You may need to pull netting along to reach the post. Stop when cord is finished.

Lastly, tie one cord's end to top of one post, lacing down to base. Allow net to gather at very top and again at the base for uniform appearance. Repeat on other side.

Once netting is laced, skirting may be placed onto the goal's base. Skirting wraps around the base, sandwiching the net and pipe in between. This will provide protection inside and out. Center skirting, starting where the center bar meets the base. Lace out to the posts and tie to the post's wire loop. Skirting will not necessarily reach posts as to not impede pucks.

